

Værktøj i Nykøbing Falster



1640 T
Til ringmøtrik på gearkasse
ved knastakslens forlængelse
Spanner for nut of water pump driving
pulley shaft



1829 T bis




1920 T
Til drivaksler
Spanner for nut between hub and shaft



1930 T
Trompet for montage af manchet
Taper fitting



1989 T bis
Til ringmøtrik på relæaksel-
hus
Spanner for lower relay spindle nut

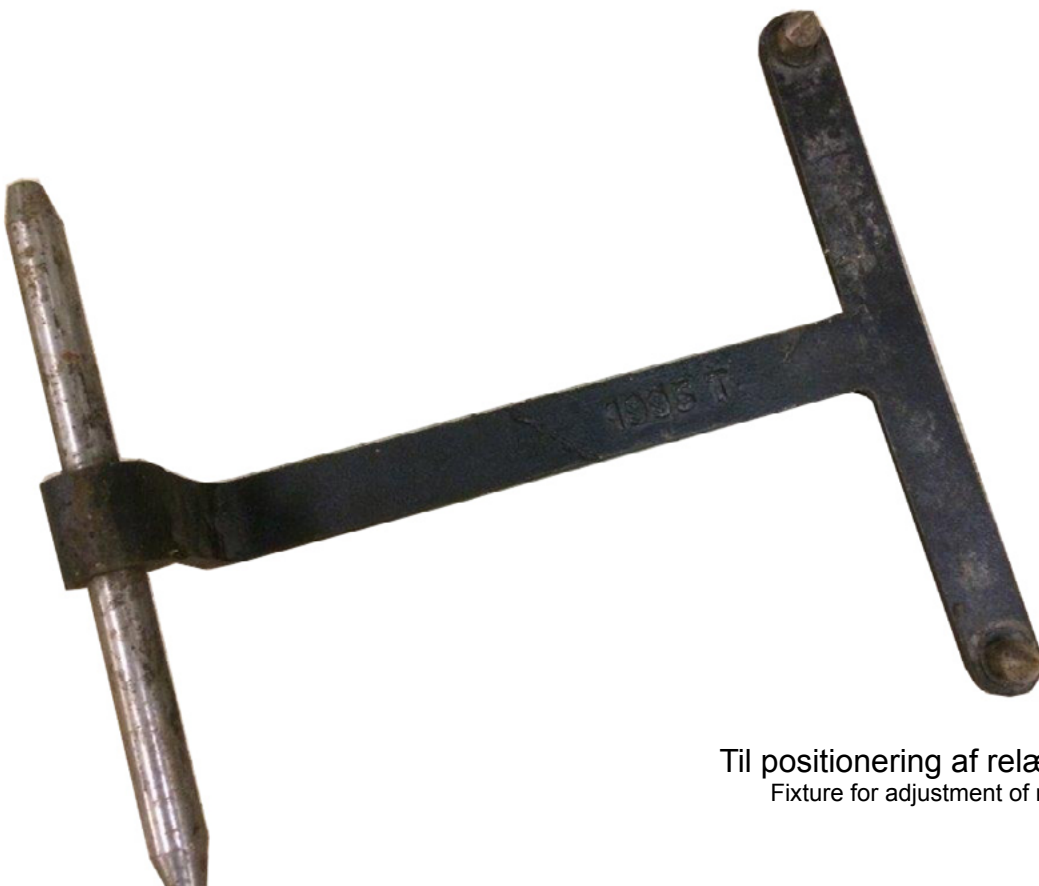

1995 T
Til positionering af relæakselhus
Fixture for adjustment of relay position



2019 T bis
Til udvendigt baghjulsleje
Extractor for hub bearing (outer cup)



2044 T
Fastholdelsesanordning til
justering kron- og spidshjul



2431 T
Til hydraulikblok og gearskiftemekanisme
Spanner for clutch housing screws (hexagon)



Facom U44x48 til afbalance-
ring af fælge med centerbe-
spænding



Lære til kontrol af værktøj
til oplining af styretøj og rat-
stamme



Tænderørsnøgler




Til forbindelsesstang mellem
tandstang og servostempel

Det er et aftræknings- og påtrykningsværktøj til drivakslernes triaxer. Det er lavet i USA i 80'erne af JBM Industries. Meget sindrigt design som er typisk for Don James der lavede mange gode ting til Citroën dengang.



$\wedge$ SPIDER PULLER, J.B.M. 9

Dette er manualen til
 aftræknings- og
 påtrykningsværktøj
 til drivakslernes
 triaxer.

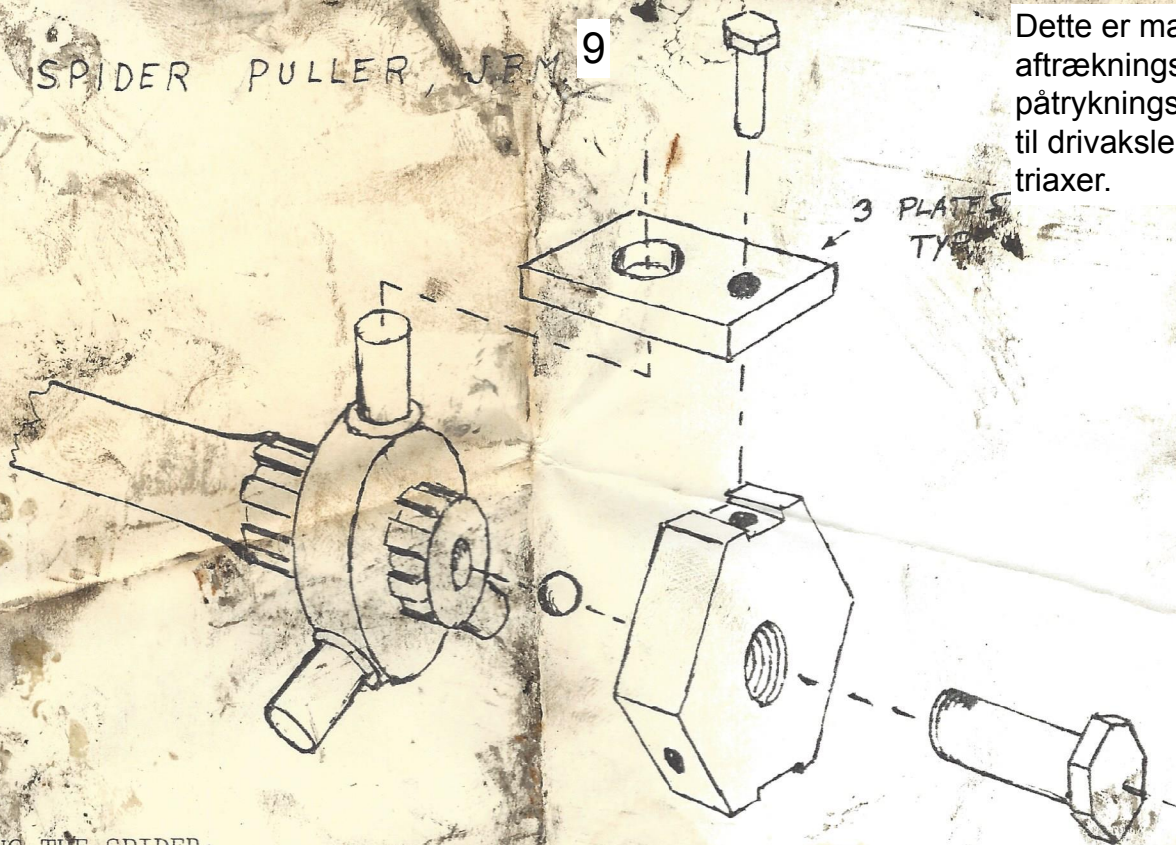


PULLING THE SPIDER:

Remove the circlip from the end of shaft with screwdrivers or duckbill snap-ring
 plier. Assemble tool as shown above using grease on the ballbearing to retain
 in position. Keep screw threads well greased. Place a small amount of pressure
 on screw and tighten bolts on the 3 plates. Tighten screw to draw the spider.
 TAKE NOTE OF SPIDER POSITION BEFORE REMOVING.

$\wedge$ SPIDER PUSHER J.B.M.

KEEP ALL PARTS OF TOOL WELL OILED AND IN A DRY PLACE.

USE ONLY CV-JOINT GREASE
 TO LUBRICATE THE JOINT.
 DO NOT USE WHEEL-BEARING
 GREASE! A teaspoon of gear
 oil will aid flow and fight
 the effects of centrifugal
 force. Be sure boots are in
 good condition.

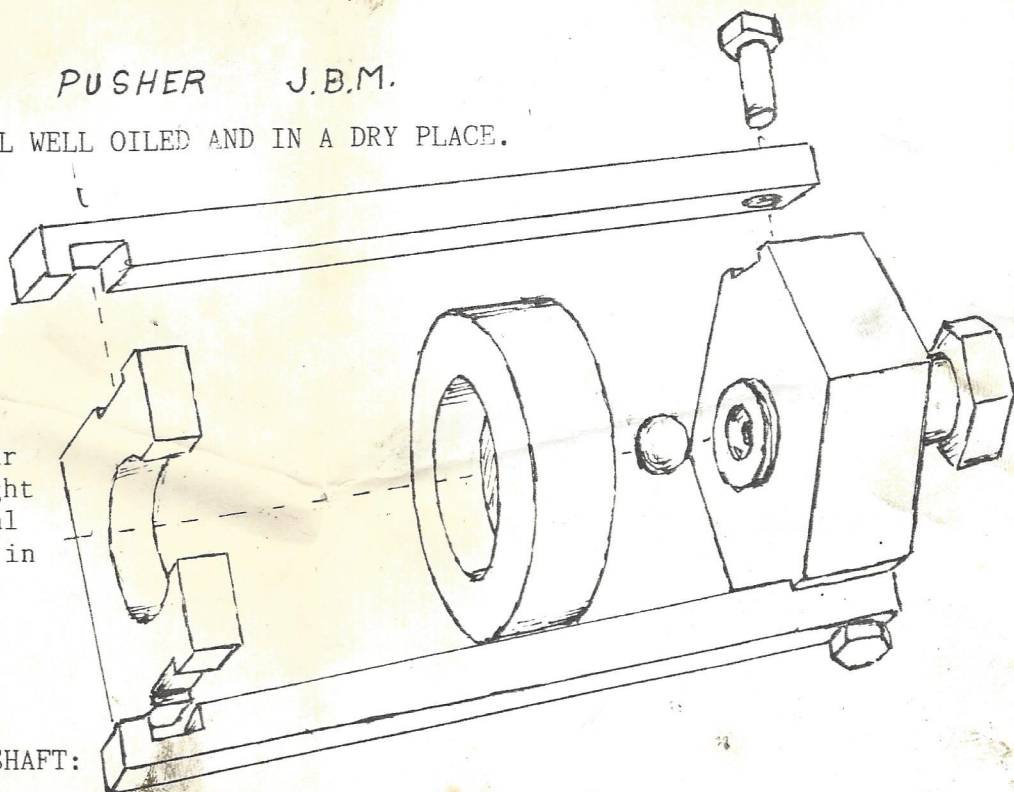

PUSHING THE SPIDER ON SHAFT:

Assemble tool as shown above. (Assemble tool on the shaft with spider in position.)
 Be sure the flats on the aluminum cup are positioned over the 3 axes of the spider.
 Be sure shaft is lubricated with grease to ease installation.